
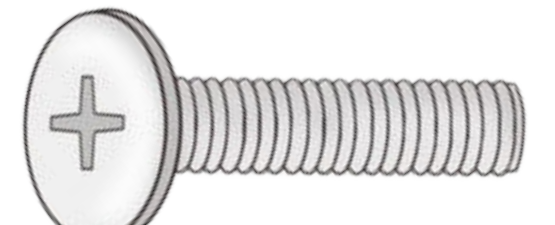
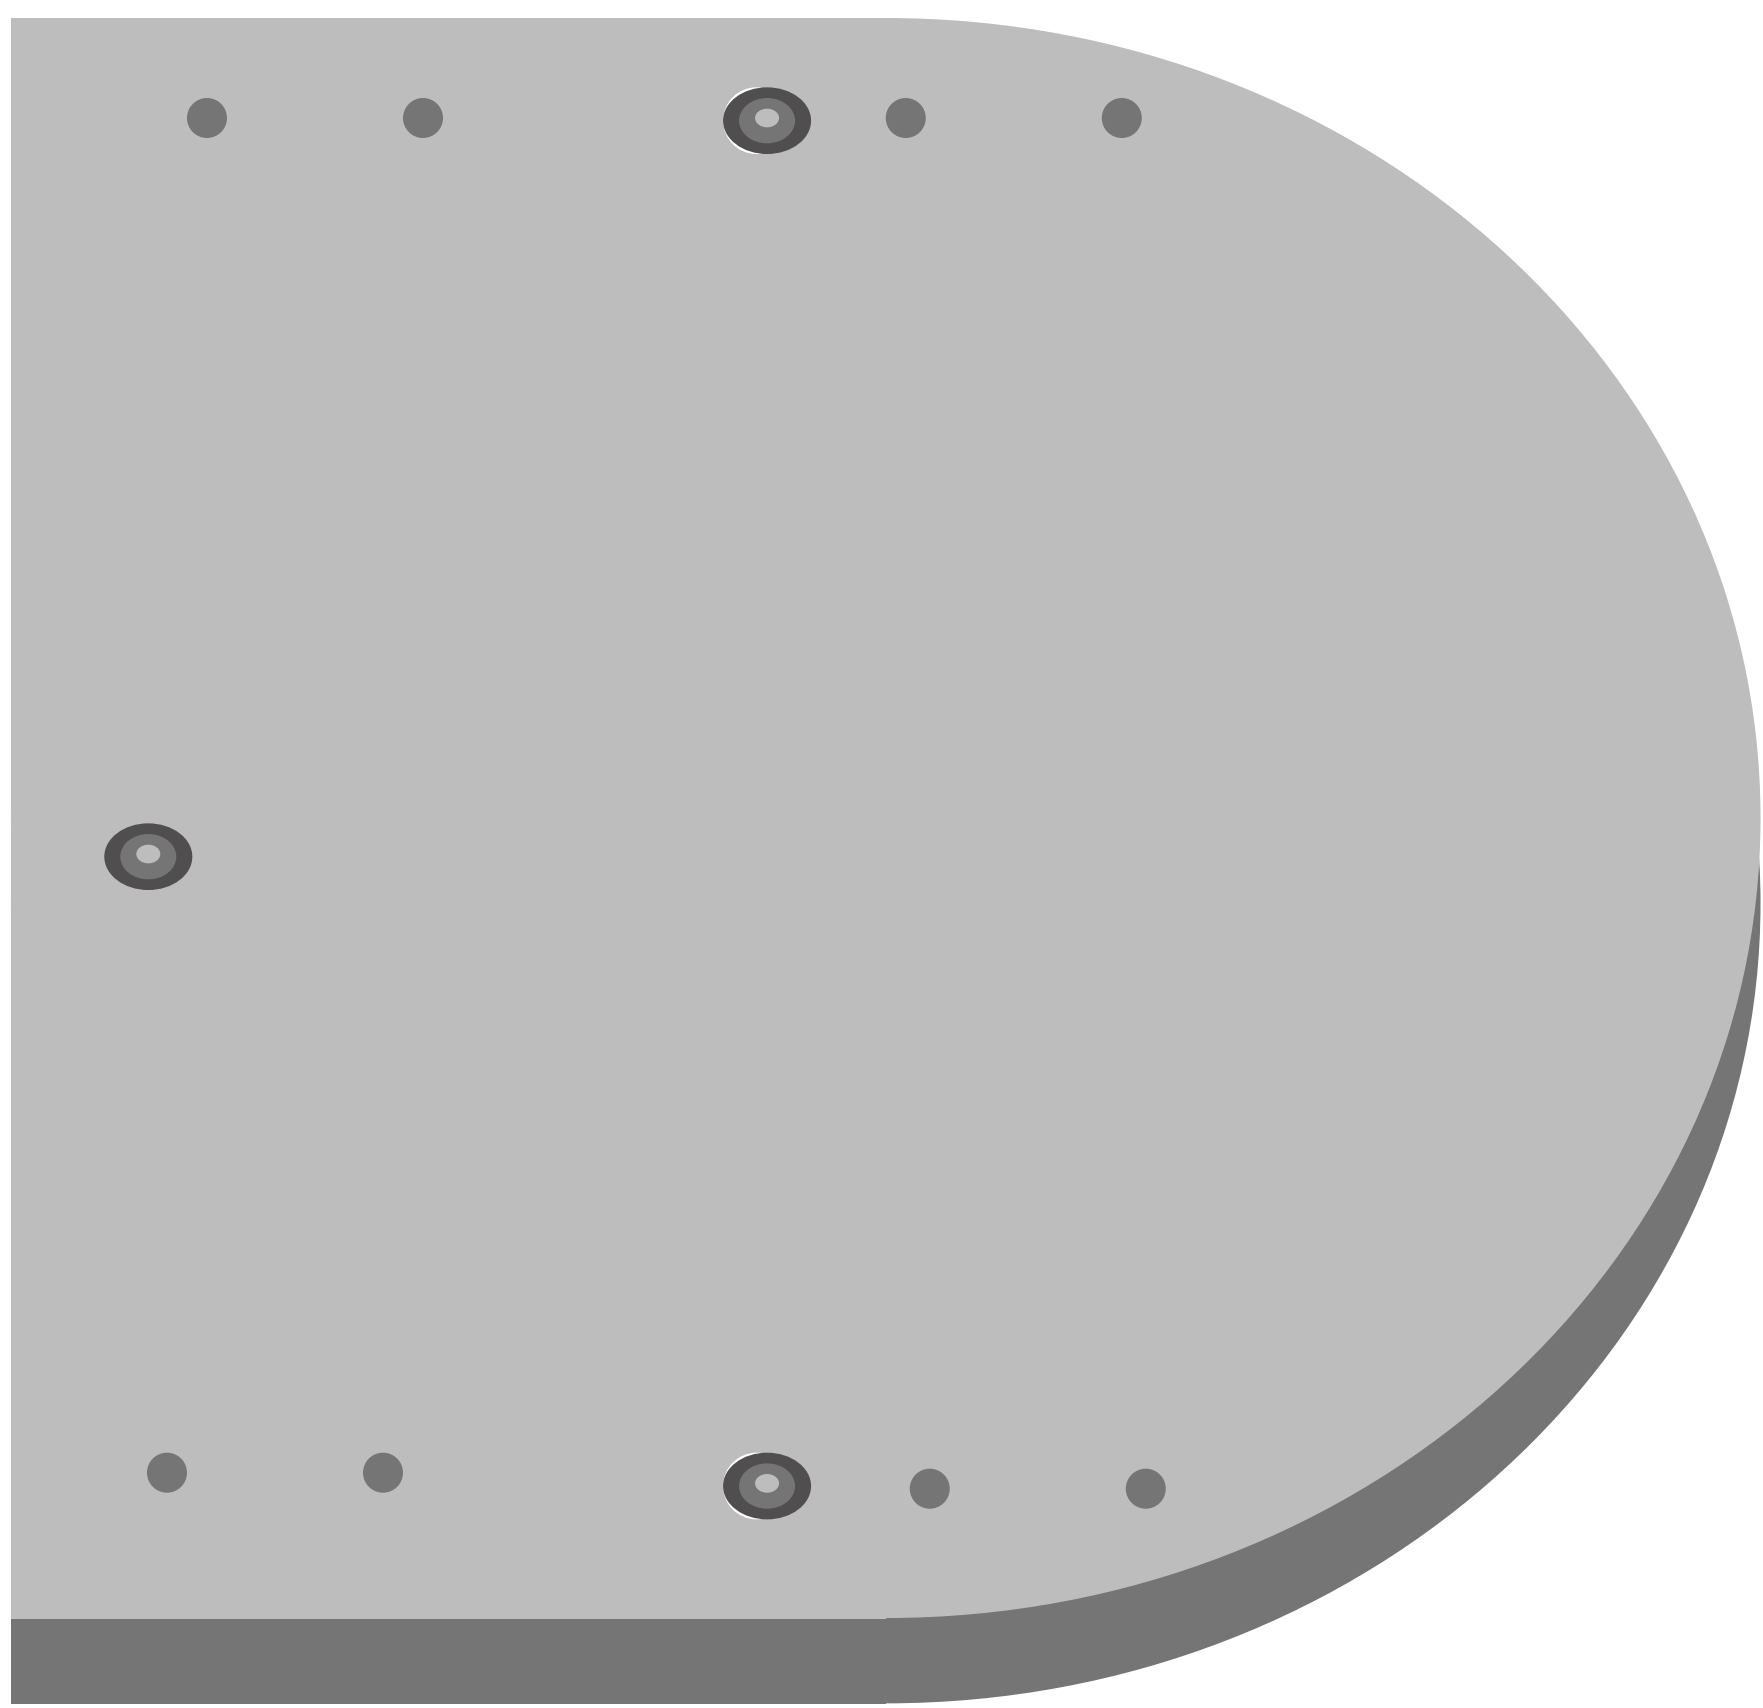


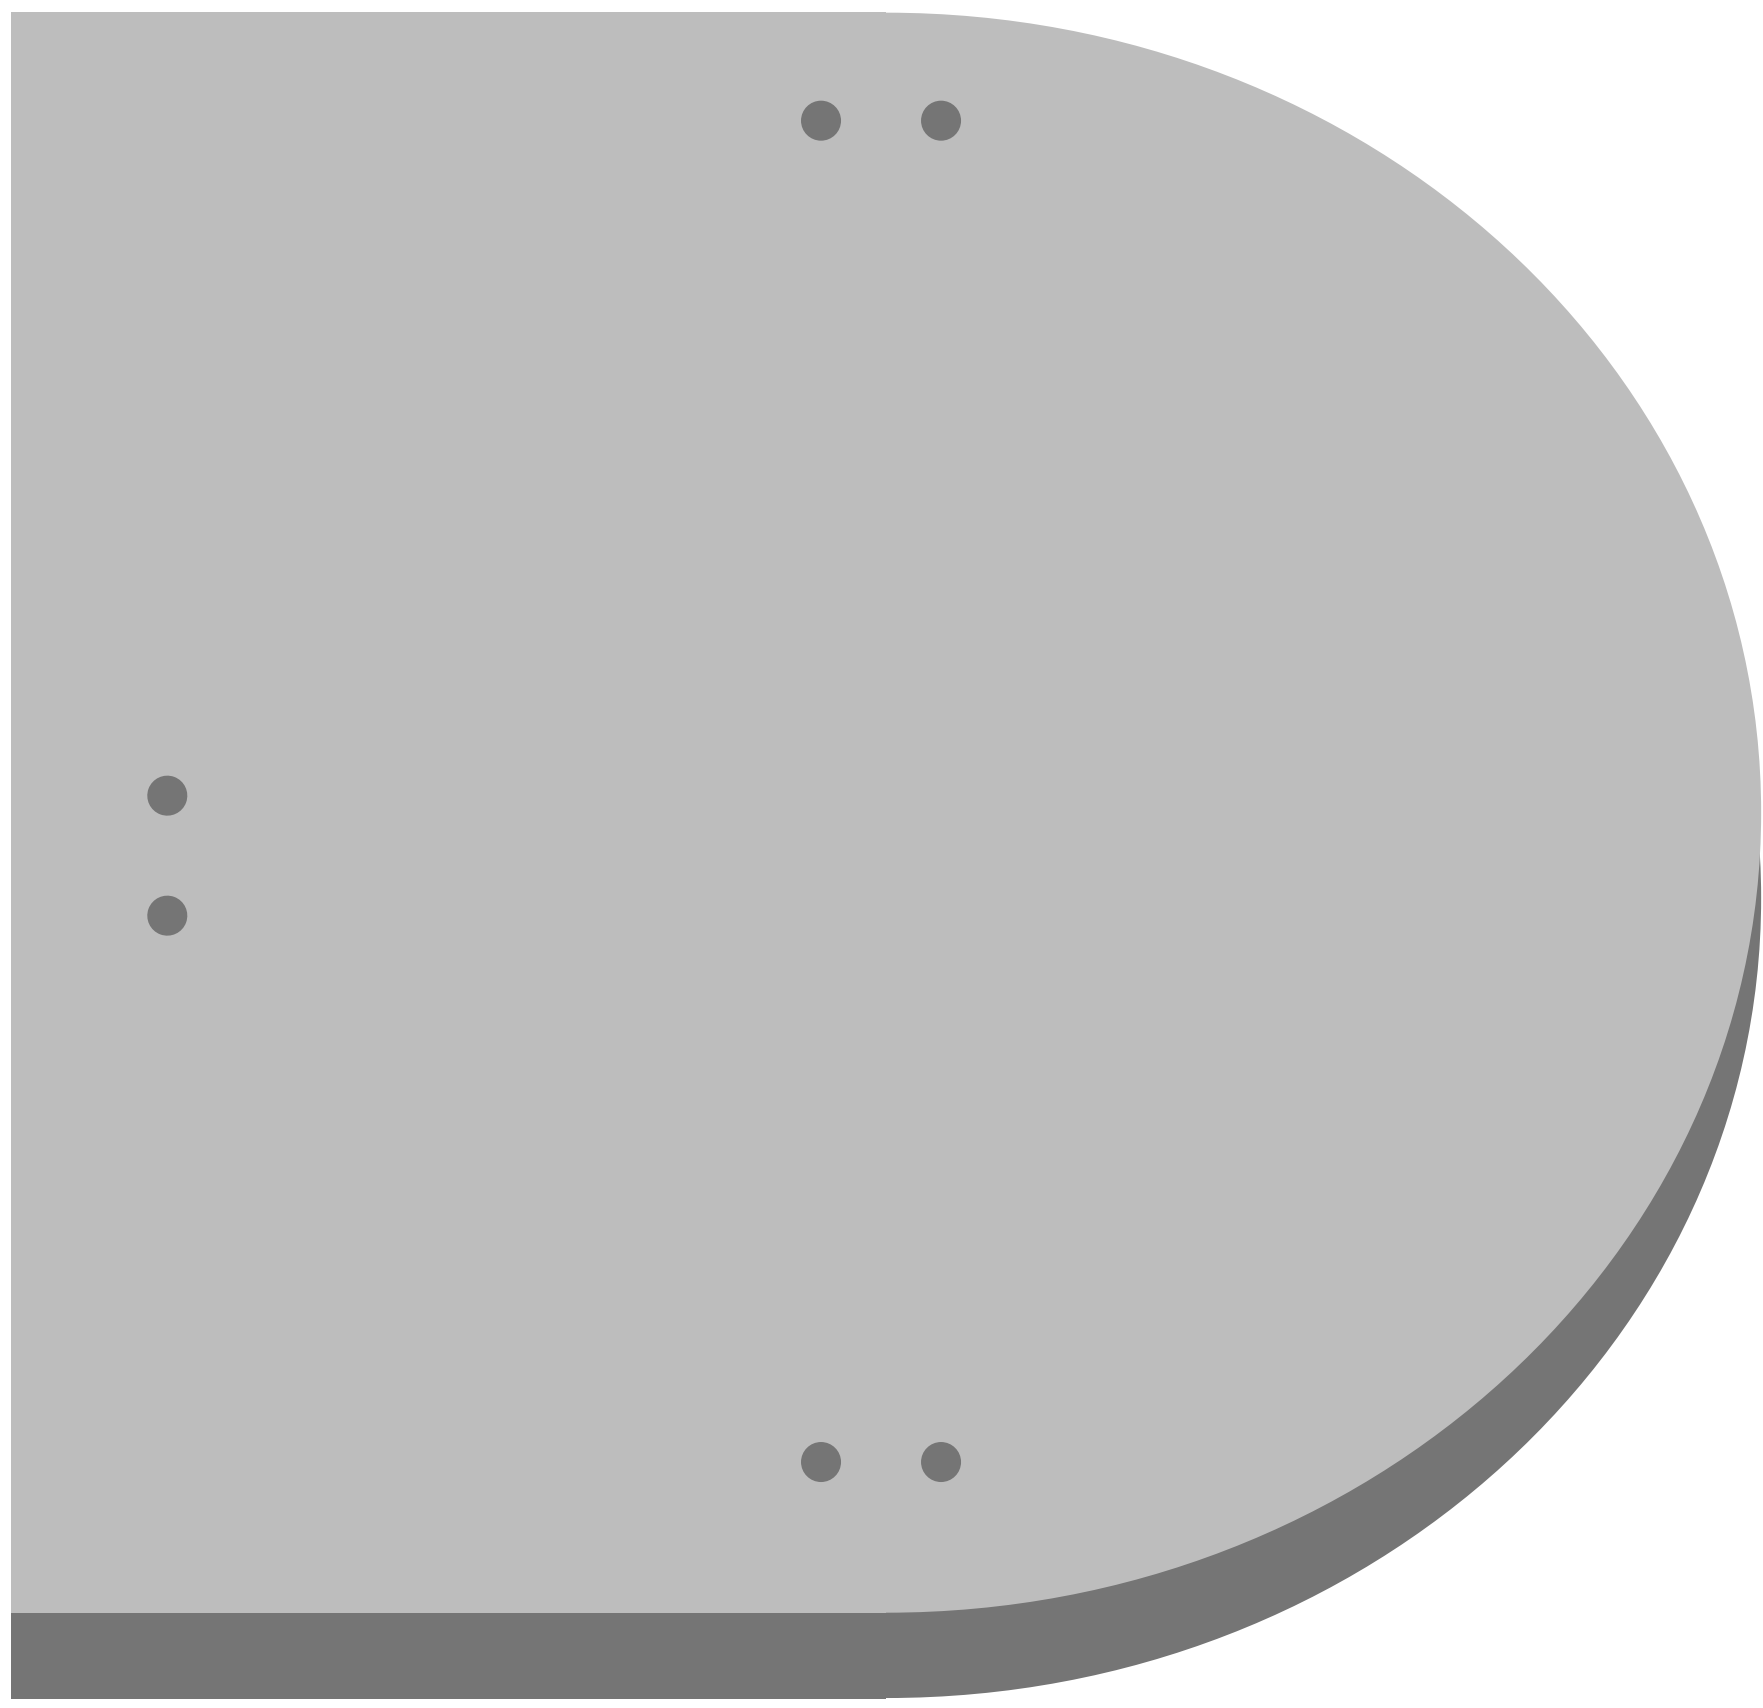


WHEELED SIDE TABLE INSTALLATION

 X14
 X3
 X4



X3
Bottom Panel 36×36cm


Top Panel 36×36cm


The points where you need to screw are pre-marked on the panel.

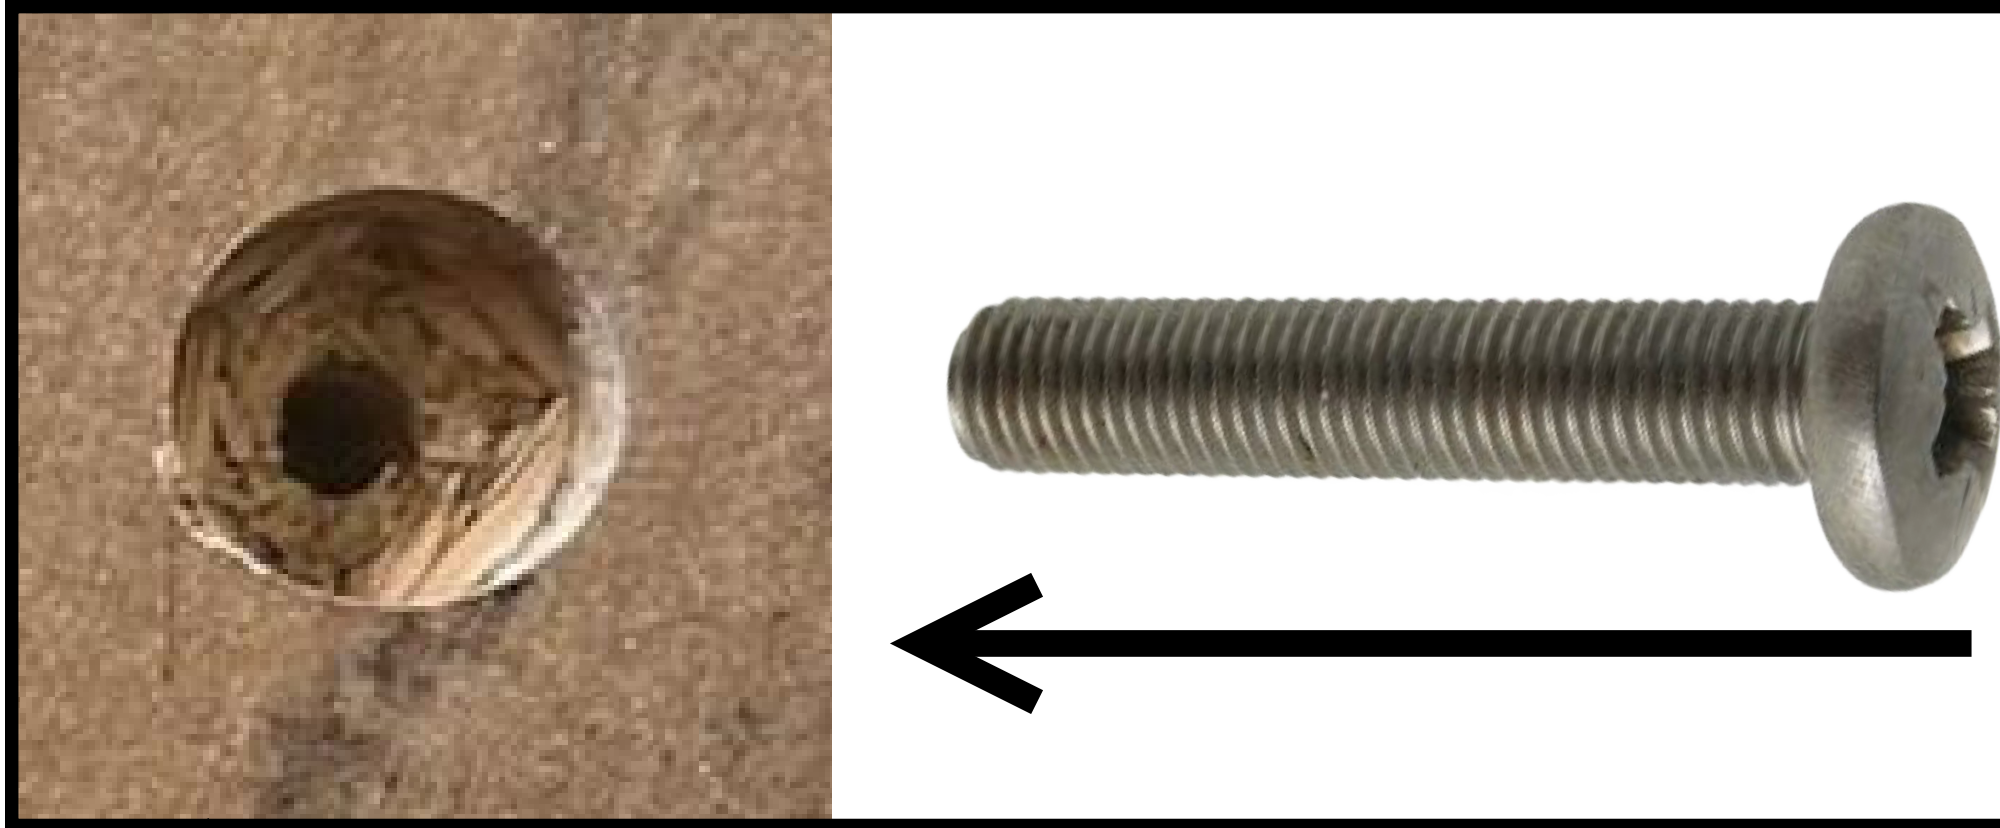


Please Note! The 3 holes you see in the image opened on the panel are for YSB screws. YSB screws must be inserted through these pre-set holes. After the screw is inserted, the screw head will be fully inserted into the slot and the floor will be levelled.

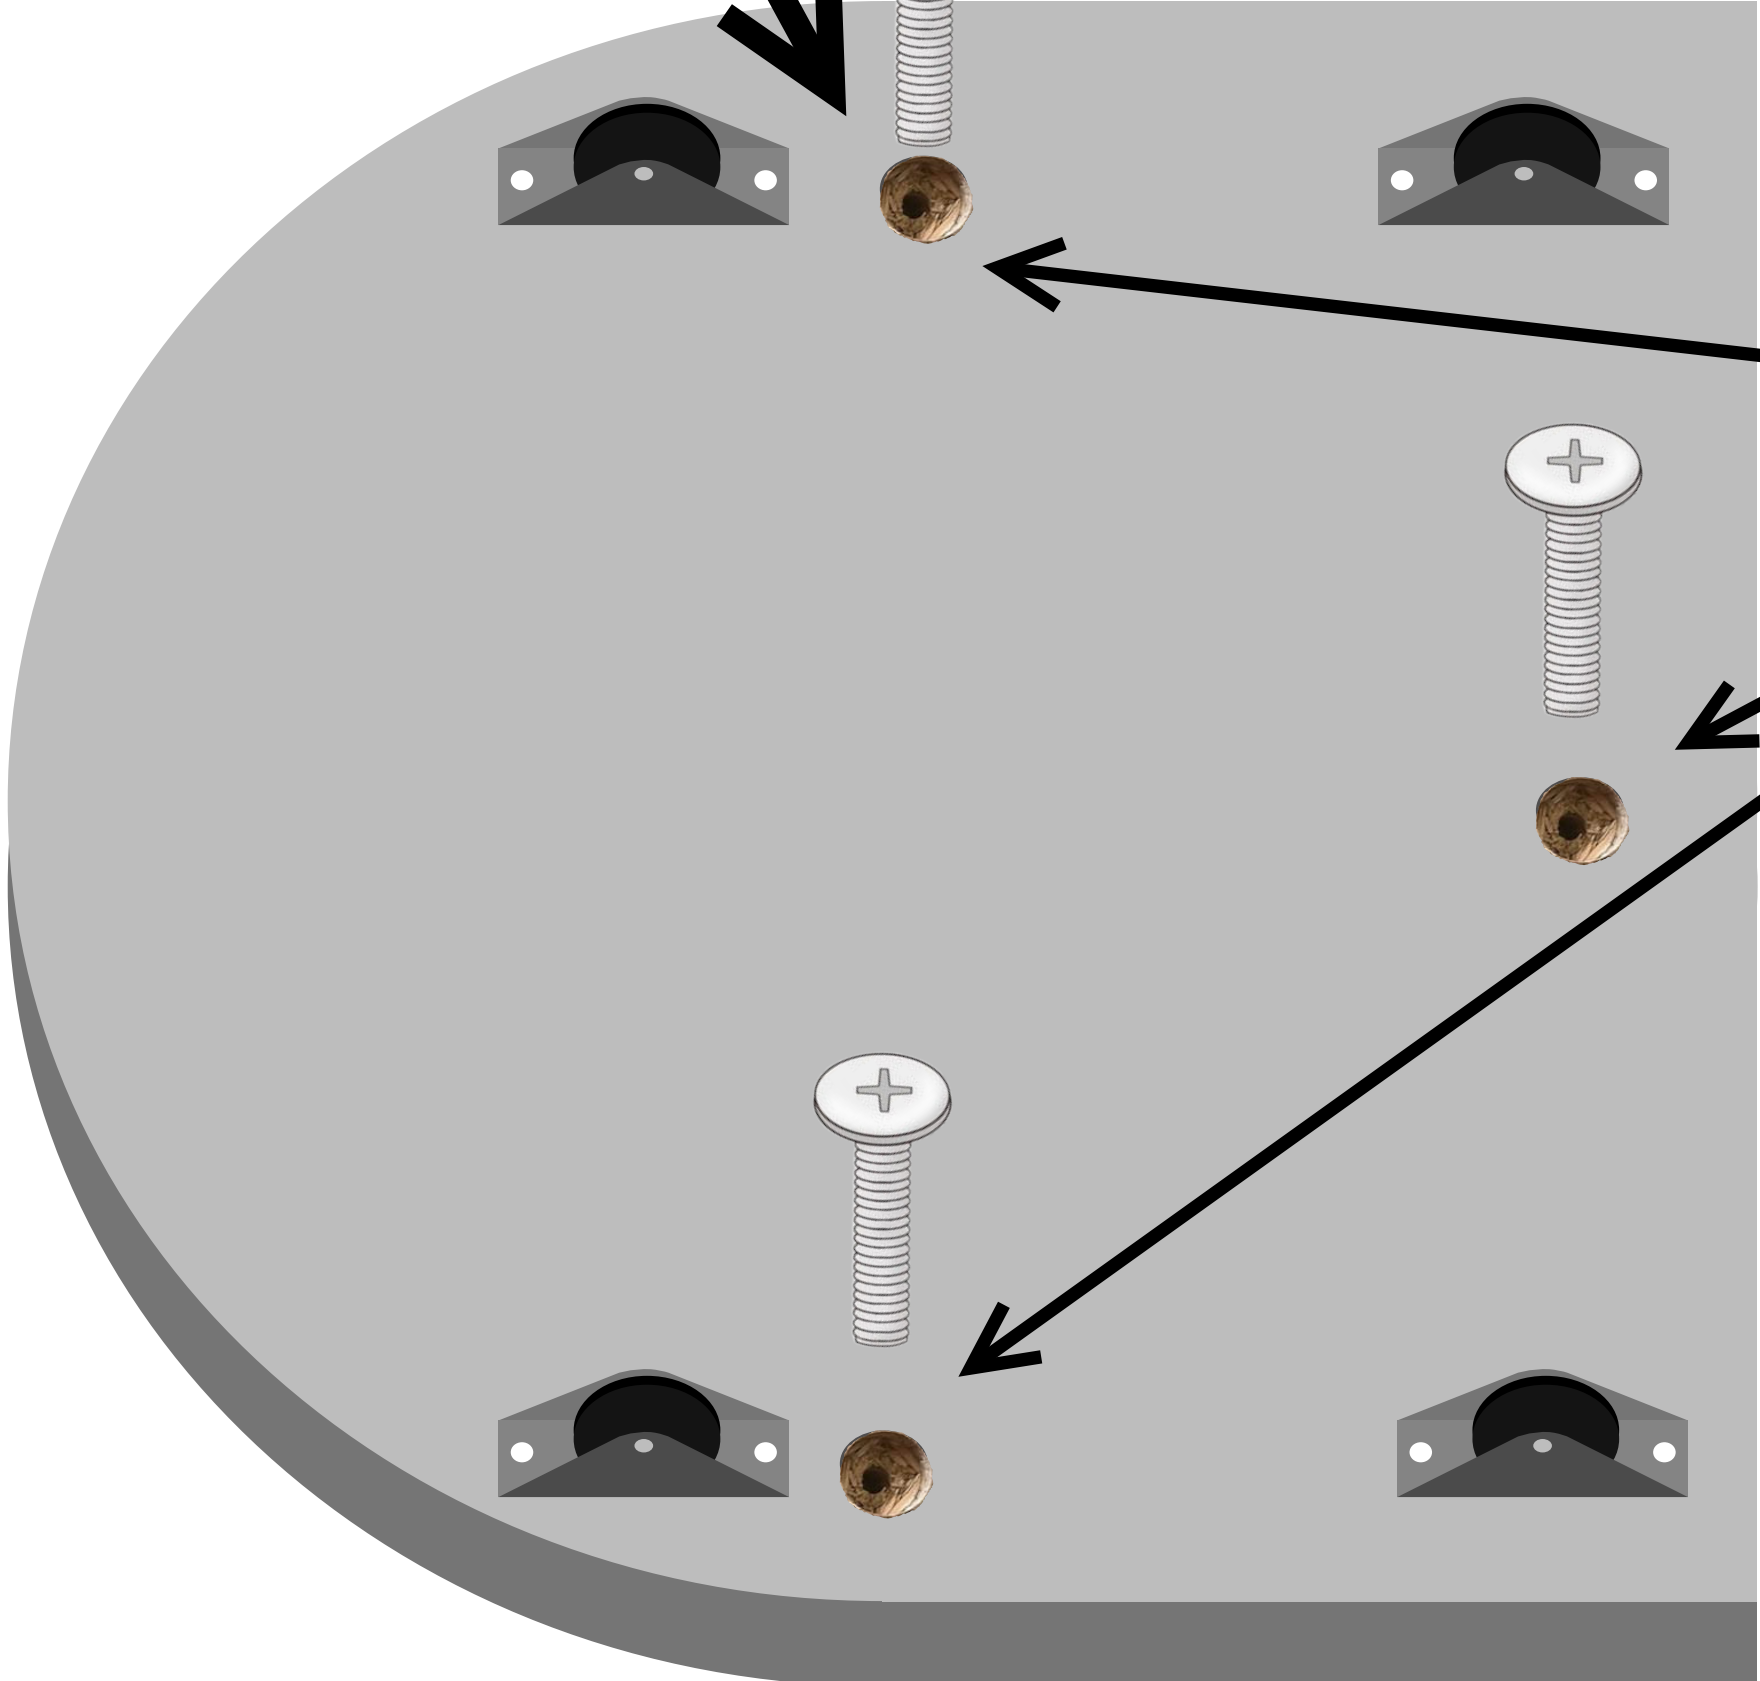

Fix the iron bars to the bottom panel with 3 YSB screws.

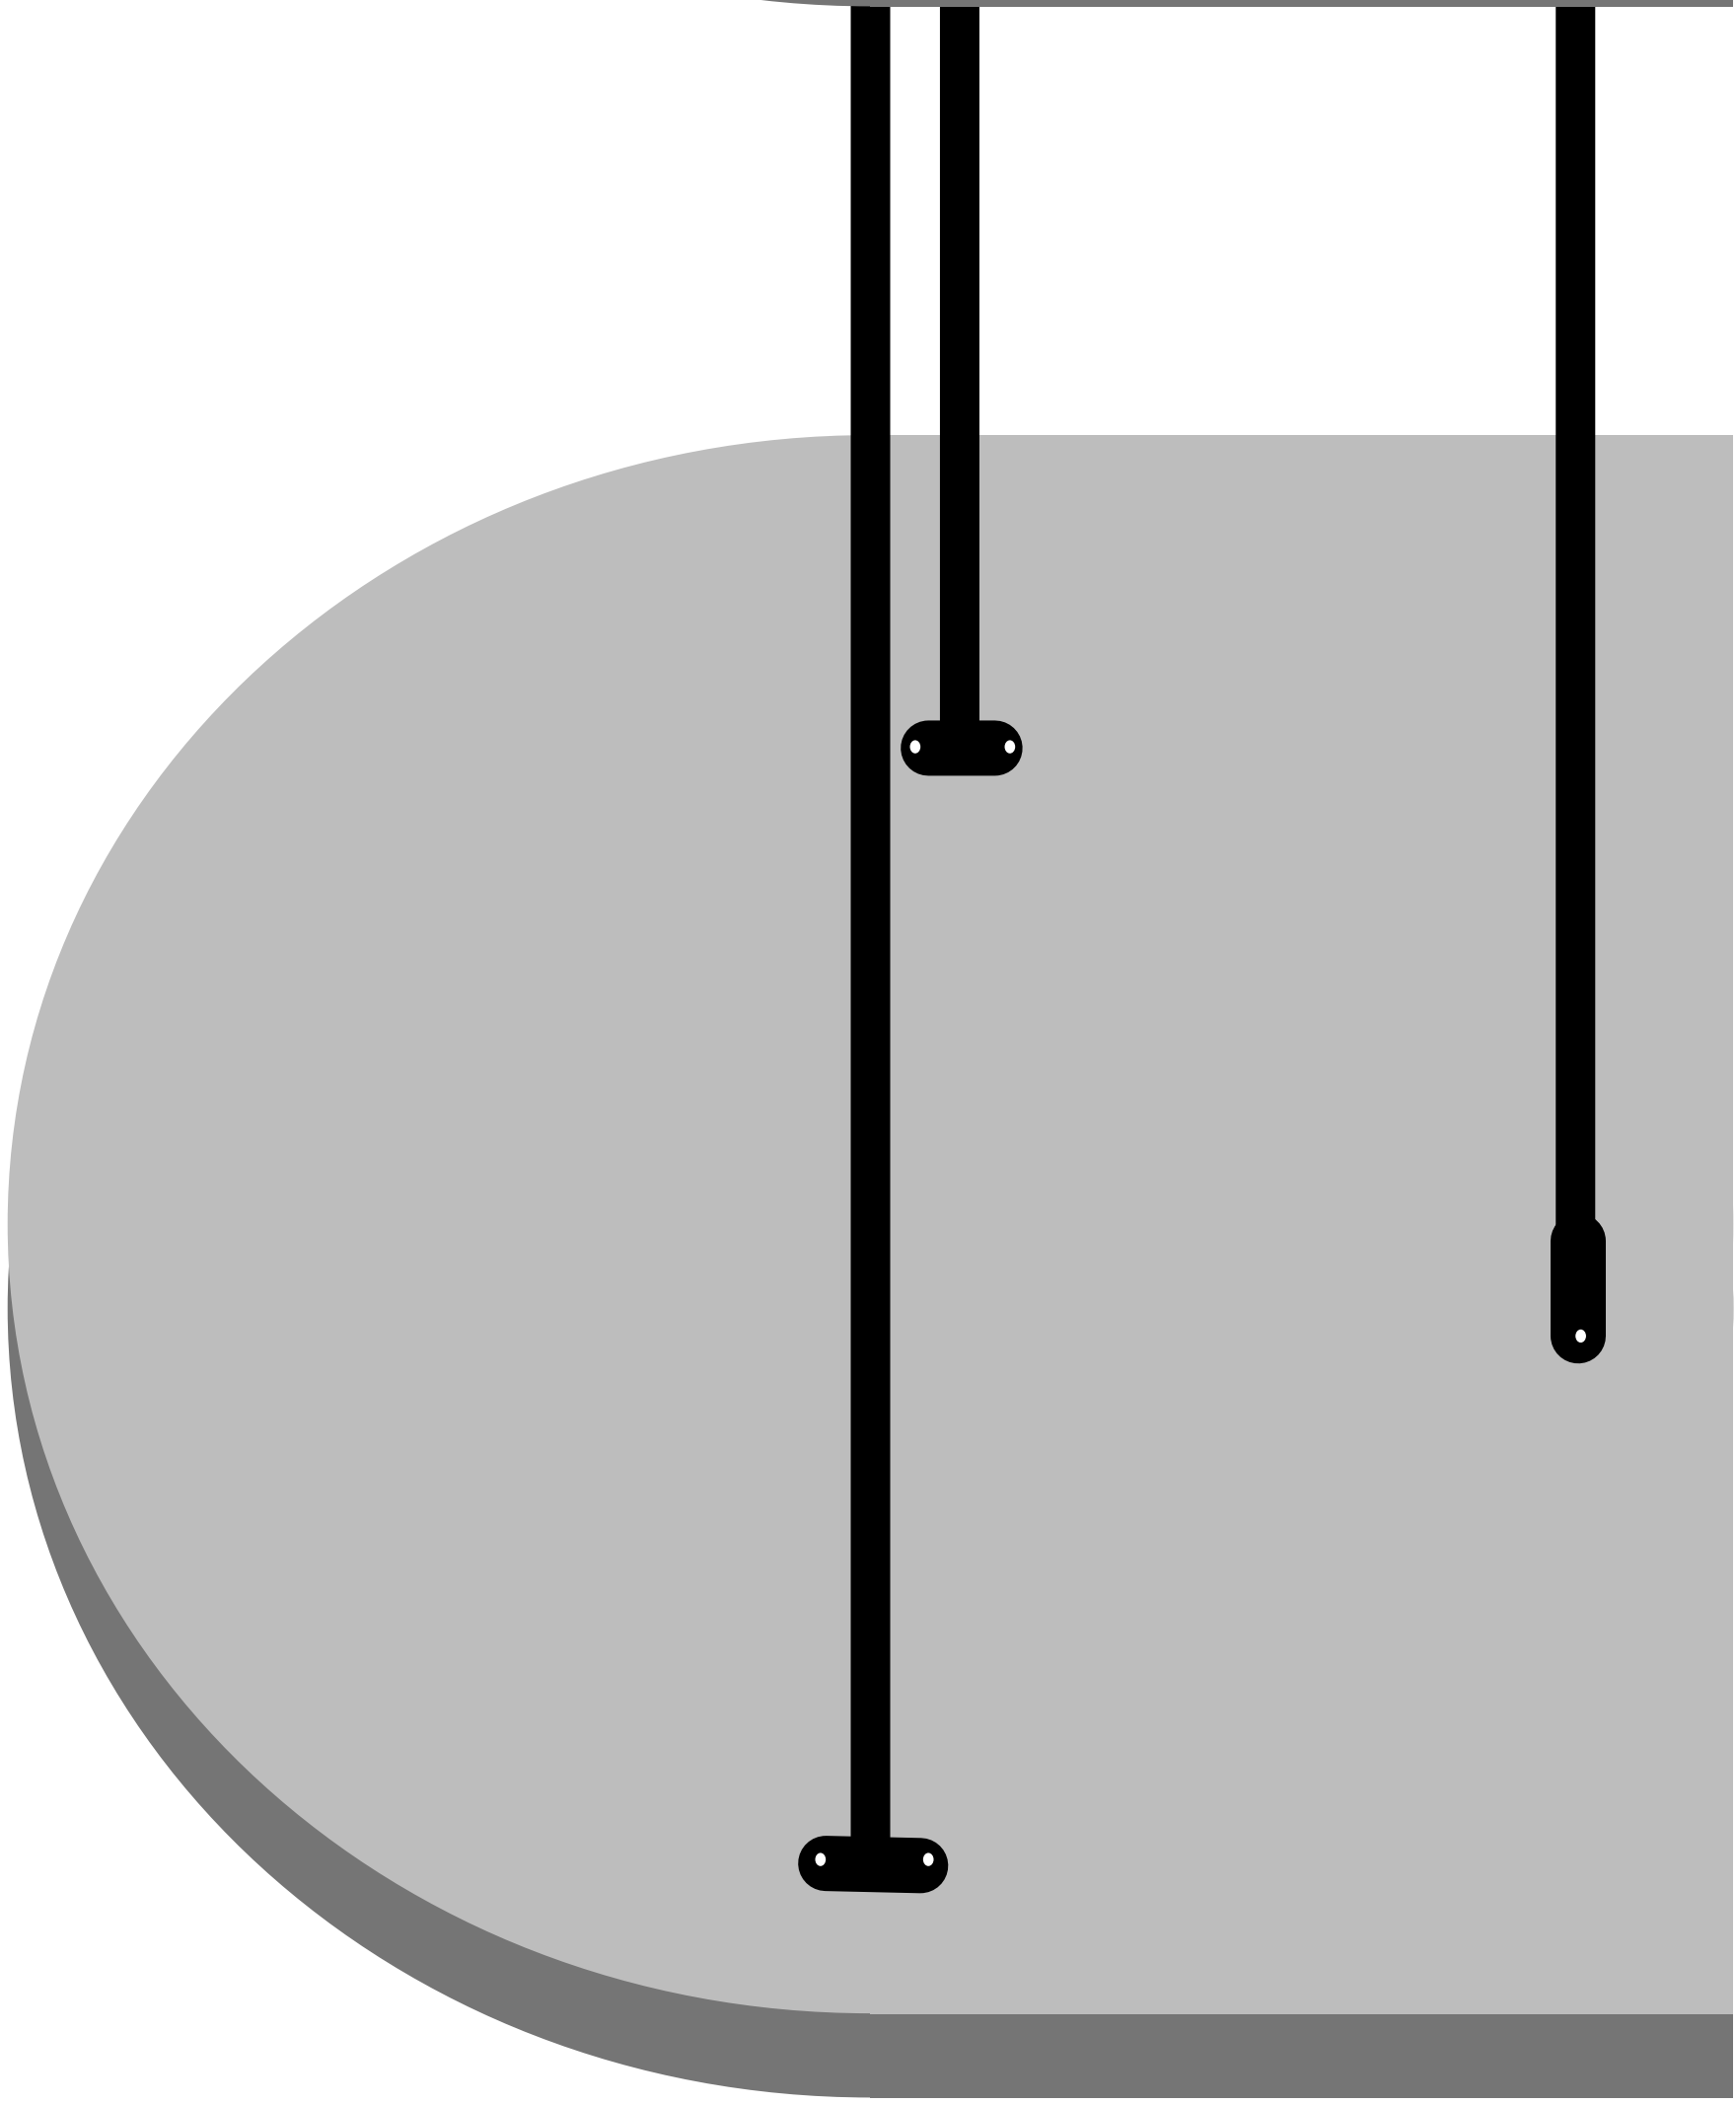

It is the bottom of the bottom panel on the left. Fix the wheels of the product (4 pieces) with 4×36 screws as shown.

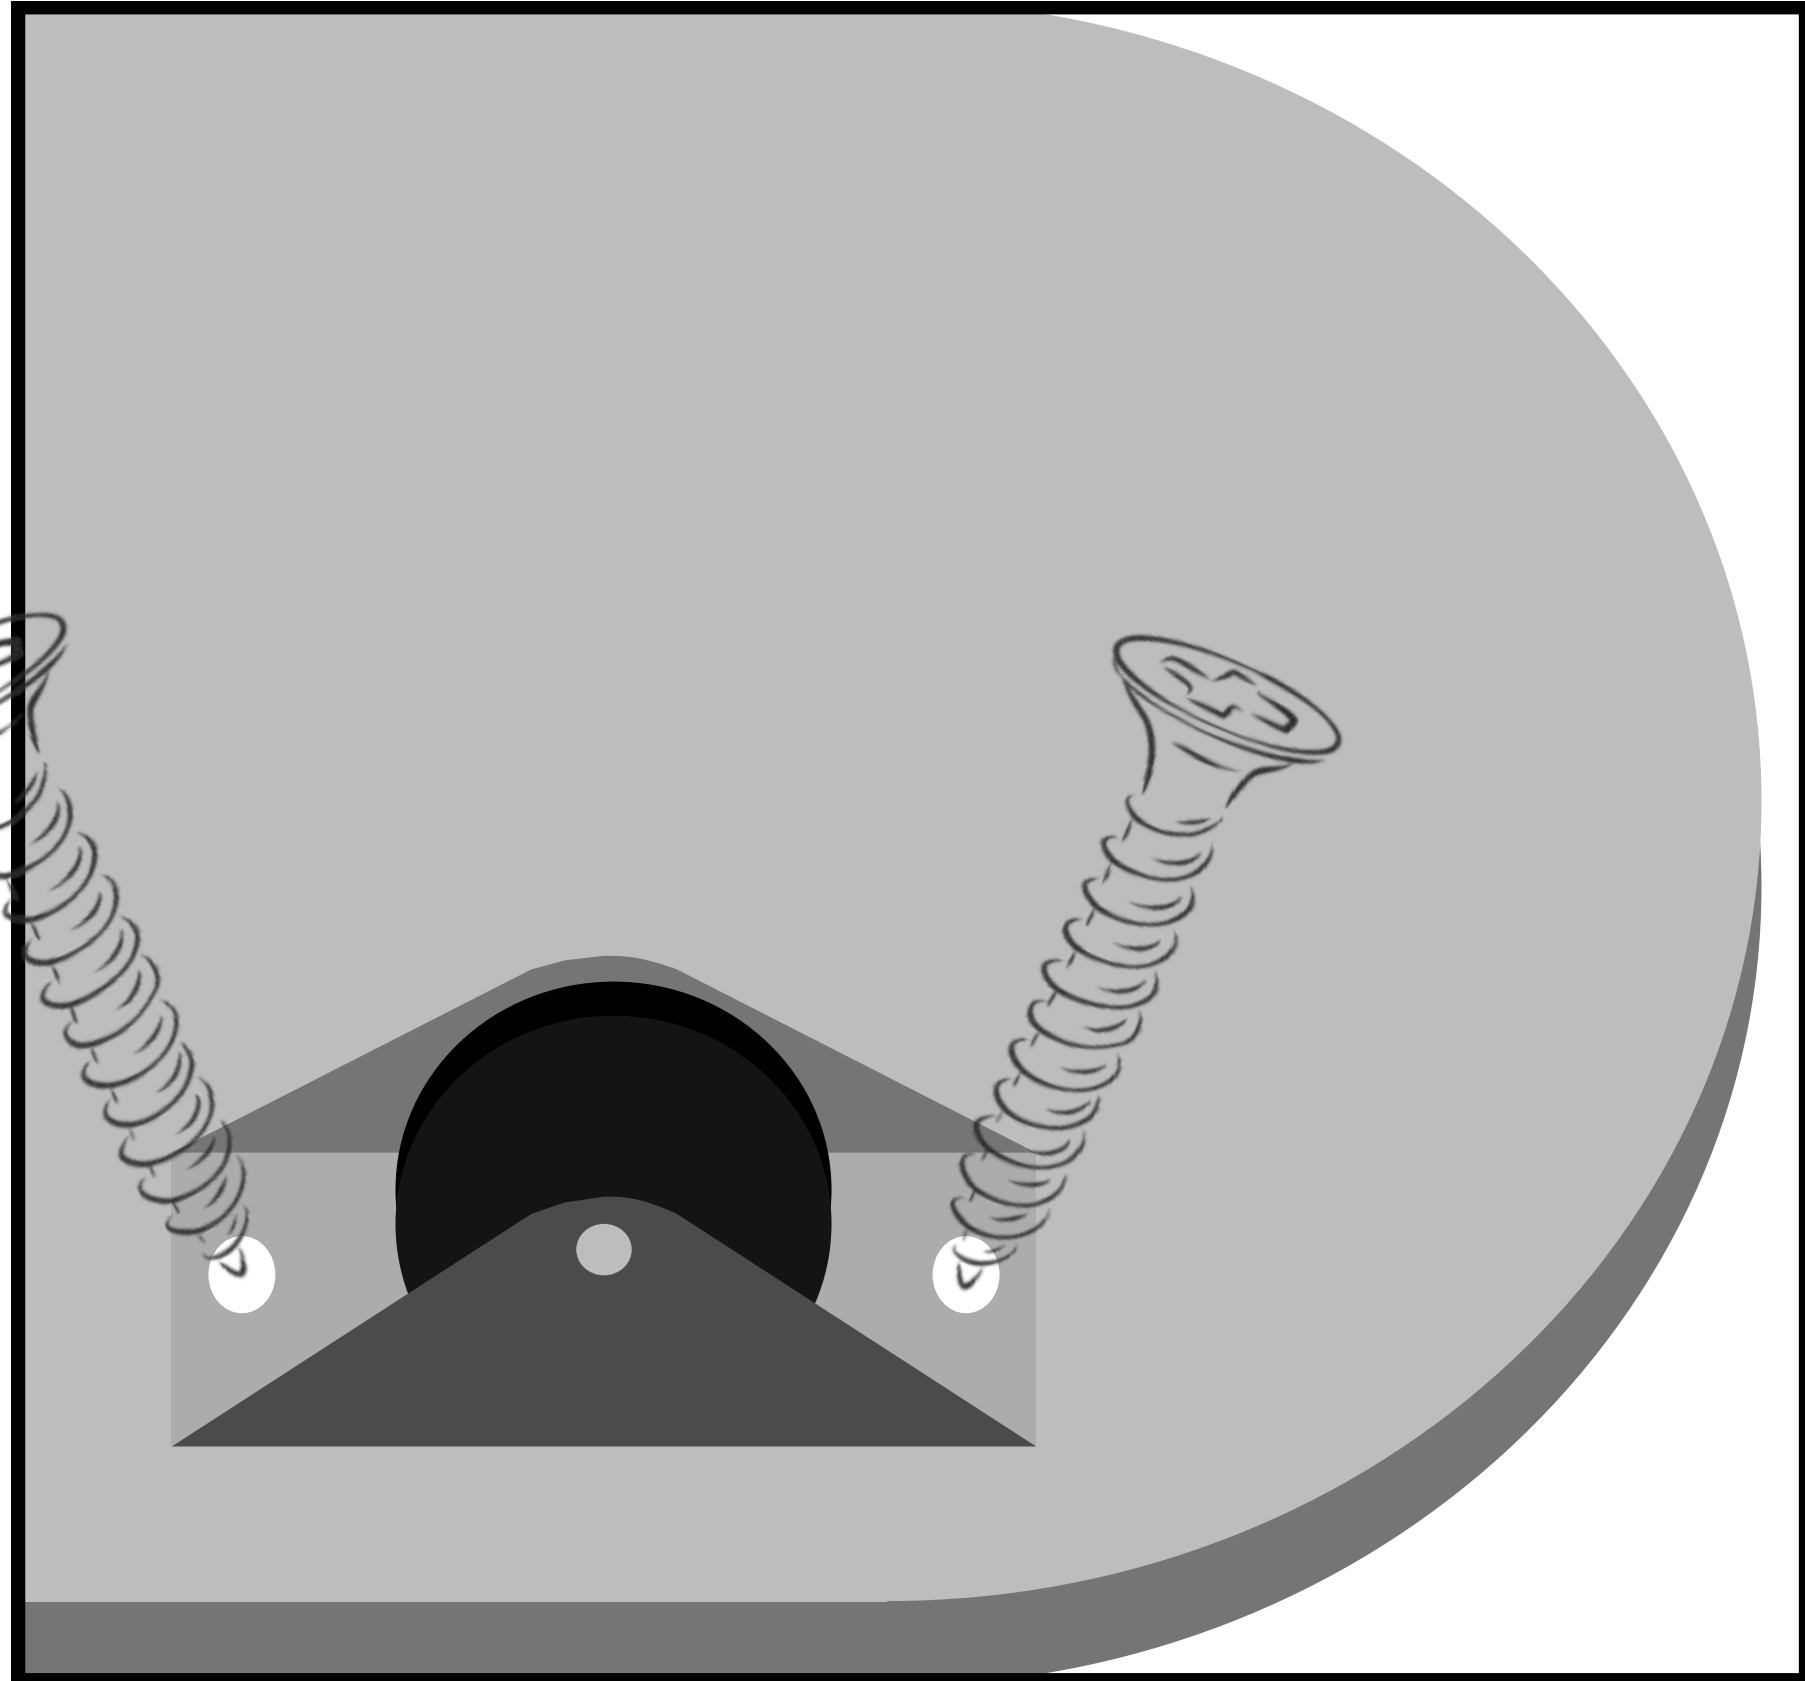

The lower part of the top panel is visible on the right. Fix the iron bars to the top panel with 4×36 screws as shown in the example.

